




ROARY Art.uk.com
Piston Art.uk.com

Installation instructions

Read and follow these instructions carefully. This version of the CG-Lock does NOT fit all cars. Do not use unless you are certain this version of the CG-Lock can be installed exactly according to the following instructions. You must have a "single pass" tongue on you car's seat belt. If you cannot install the CG-Lock exactly as described below, return it for a full refund (see "Return Policy"). [View Installation video here!](#)

- 1 Determine if your seat belt uses a "single pass" or "multiple pass" tongue.

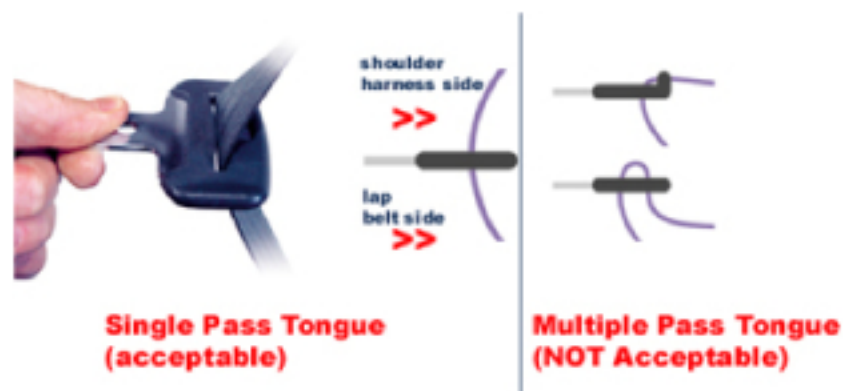

If your vehicle has a multiple pass tongue, return the CG-Lock for a full refund.

the bottom of the clamp plate, remove the LONG screws and repeat Steps 3, 4, and 5 with the SHORT screws. See figure "D".

Confirm that the CG-Lock is firmly attached to the tongue by trying to pull the CG-Lock off the tongue. The CG-Lock should remain attached to the tongue even with up to about 30 pounds of force applied. Should the CG-Lock ever become unattached, safely stop the car and reattach it.

6 Note that the SLIDE has channels underneath and that the MAIN BODY has flanges. See figures "E" and "F".

Lay the shoulder belt webbing over the knurled roller in the MAIN BODY as shown. Hold the SLIDE so that the finger grip is on top and pointing towards the seat belt tongue. Hold the SLIDE over the seat belt webbing and engage the channels of the slide over the flanges on the Main Body. Push the SLIDE onto the MAIN BODY. See figure "G".

The red arrows printed on the CG-Lock SLIDE point to the proper direction for moving the SLIDE to the "On" and "Off" positions. You may need to rotate the lever down slightly to push the slide over the roller. **IMPORTANT:** push the SLIDE onto the MAIN BODY evenly. If you press one side on harder than another, or twist the slide, the slide may jam. You then have to remove the slide and restart with even pressure. Note also that the first few times you engage the SLIDE, it may feel stiff and hard to push. This is normal and will fade over time. You may need to use some force to fully engage the slide.



2 Parts List - In each package you will receive:

Item Number	Quantity Supplied	Part Name
1	1	Main Body (serial number of back)
2	1	Slide
3	1	Lower Clamp Plate
4	4	Cap Screws (2 Long 2 Short)
5	1	Allen Key



3 Insert the two LONG cap screws through the holes in the MAIN BODY and engage just a few threads of the LOWER CLAMP PLATE as shown above. Note that the grooved side of the LOWER CLAMP PLATE faces up. Use the supplied allen key. See figure "A".

4 Sit in the seat on which you are going to install the CG-Lock. Buckle the seat belt. Make sure the belt webbing is not twisted. See figure "B".

5 Unbuckle seat belt and place the CG-Lock as shown here over the seat belt tongue. Centre the clamp area behind - NOT OVER - the slot through which the belt webbing passes. Tighten the cap screws with the supplied allen key firmly but DO NOT over tighten. See figure "C".

IF THE TIPS OF THE SCREWS PROTRUDE (STICK OUT) through

